

**IND 1K300**



**105817**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

**Technical Support Hotline:** +49 5258 971-197

[www.bartscher.com](http://www.bartscher.com)



Version: 2.0

Date of preparation: 2025-01-28

---

## Original instruction manual

1	Safety .....	2
1.1	Explanation of Signal Words.....	2
1.2	Safety instructions.....	3
1.3	Intended Use .....	7
1.4	Unintended Use .....	7
2	General information .....	8
2.1	Liability and Warranty .....	8
2.2	Copyright Protection .....	8
2.3	Declaration of Conformity .....	8
3	Transport, Packaging and Storage .....	9
3.1	Delivery Check.....	9
3.2	Packaging .....	9
3.3	Storage .....	9
4	Technical Data.....	10
4.1	Technical Specifications .....	10
4.2	List of Components of the Appliance .....	11
4.3	Functions of the Appliance.....	11
5	Installation and operation .....	12
5.1	Installation.....	12
5.2	Operation .....	13
6	Cleaning .....	17
6.1	Safety Instructions for Cleaning .....	17
6.2	Cleaning.....	18
7	Disposal.....	18



**Read these instruction manual before using the appliance and keep it available at all times!**

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

## 1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

### 1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



**DANGER!**

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



### **WARNING!**

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



### **CAUTION!**

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

### **IMPORTANT!**

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

### **NOTE!**

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

## 1.2 Safety instructions

### Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.

- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

### Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

EN

### Safety of Induction Plate Operation

- During operation, the heating area is getting very hot.  
**Information: Induction cooker does not generate heat in the process of cooking. Nevertheless, the temperature of cookware heats up the heating area and the surface remains hot after use. Do not touch any hot surfaces of the appliance.**
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.
- Do not put metal kitchen utensils, lids, knives nor any other metal objects on the heating area. These objects might heat up after switching the appliance on.
- Remember that wearable items, e.g. rings, watches etc., may heat up when they are close to the cooker's plate.

## Safety

---

- In order to avoid overheating, do not place any aluminium foil or metal plates on the heating surface of the appliance.
- Do not heat up sealed containers, e.g. canned food, on the heating area of the induction cooker. Resulting overpressure may cause explosion (rupture) of a container or a can. The canned food is best to open it, put it in a pot filled with water and place the pot on a heating area in order to heat it up.
- The heating area is made of a temperature-resistant glass. In case of damage, even if it is only a small fracture, the device should be immediately disconnected from the power supply and you should contact the service company.

## Electromagnetic Fields

- Magnetized items, e.g. credit cards, data storage devices or calculators, may not be placed in an immediate vicinity of the switched on appliance. Magnetic field might damage them.
- Do not open the bottom cover!
- Cookware should always be placed in the middle of the cooking area, so that pot bottom covered the electromagnetic field to the maximum extent.
- Scientific researches proved that induction cookers pose no threat. Nevertheless, people with cardiac pacemaker should keep a distance of at least 60 cm from the working appliance.

## Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

## Operating personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

## Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.
  
- Pots or pans should always be lifted from the induction hob and not moved over, as otherwise their bottom might scratch the glass.

### 1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Preparing and heating-up foods with the use of suitable cookware.

### 1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Heating of rooms.
- Heating-up flammable, hazardous to health and volatile, etc. liquids and materials.

## 2 General information

### 2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

EN

### 2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

### 2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

## 3 Transport, Packaging and Storage

### 3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

### 3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

EN

### 3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

## 4 Technical Data

### 4.1 Technical Specifications

<b>Name:</b>	<b>Stock-pot stove IND 1K300</b>
Art. No.:	<b>105817</b>
Material:	stainless steel
Heating plate material:	glass
Hob size, Ø in mm:	300
Glass hob dimensions, Ø in mm:	435
Number of power output levels:	9
Hob max. output, in W:	5000
Max. load-bearing capacity, in kg:	60
Connected load:	5 kW   380-400 V   50-60 Hz
Dimensions (W x D x H), in mm:	500 x 500 x 410
Weight, in kg:	15,4

EN

We reserve the right to implement technical modifications.

#### Version / Characteristics

- Power supply type: electric (induction)
- Equipment connection: 3 NAC
- Control: power output
- Cookware detection
- Overheating protection
- Control: rotary control knob
- Features: 2 fans
- Indicator light:
  - ready for operation
  - operation mode

## 4.2 List of Components of the Appliance



EN

Fig. 1

- |                                   |                           |
|-----------------------------------|---------------------------|
| 1. Power cord                     | 2. Rear wall fans (2 pcs) |
| 3. Hob                            | 4. Control panel          |
| 5. Height-adjustable feet (4 pcs) | 6. Housing                |

## 4.3 Functions of the Appliance

The mobile stock-pot stove with output power of up to 5 kW is the ideal equipment for cooking, both indoors and outdoors. The induction hob allows for fast and efficient operation, while emitting little heat to the surroundings. The power output is controlled in a simple way — with the help of a power output controller.

## 5 Installation and operation

### 5.1 Installation

#### Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



#### CAUTION!

##### Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
  - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
  - Make sure that the designated escape routes are clear.
  - Ensure a stable position.
  - Allow sufficient space for work, maintenance and cleaning.
  - Leave the supply and exhaust air vents, if any, free.
  - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Do not place the appliance in the vicinity of devices or objects that are sensitive to magnetic fields (e.g. radio, television, etc.).
- Leave at least 5 -10 cm clearance from flammable walls and other objects.

### Connection — Electrical Power

- Verify if the technical specification of the appliance (see the rating plate) correspond to the local electricity grid.
- Electrical connection of the appliance to mains power supply must be executed by a qualified electrician, according to international, national and local regulations in force.
- The induction cooker is equipped with power cord. It must be connected with a plug or directly into a suitable mains wall socket.
- Do not use the appliance with an external timer or remote control.

## 5.2 Operation

### Method of operation of heating plates

In induction cookers the electric voltage is applied to a conductive coil under the glass. This generates magnetic field, which being a physical effect, heats the bottom of a cookware directly.

This translates to savings of time and energy, as — contradictory to traditional heating areas — there is no heating up of a heater and then of the glass heating plate.

Another advantage of the technical features described above is the very short cooking time.

Additionally, inflow of heat changes instantly with every change of settings and it may be controlled precisely. The induction heating plate reacts to changes in settings as fast a gas cooker, for the energy is delivered immediately to a pot, without the need to prior heating up of other materials.

The induction technology combines the speed of reaction with a basic benefit of the current, making it possible to precisely control heat inflow.


### Suitable Cookware

- Iron cookware
- Enamelled iron cookware
- Steel or enamelled cast iron pots/pans
- Cast iron pots/pans
- Cookware made of 18/0 stainless steel and aluminium if marked as suitable for induction (mind the description of the cookware)



Due to a specific way the induction plate operates, only cookware with a bottom subject to magnetization is suitable.

To obtain better results, use only pans/pots with a diameter of 12 - 30 cm.

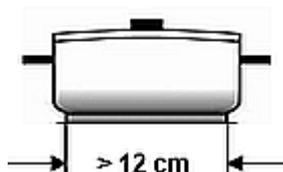

EN

### Not Suitable Cookware

- Containers with bulged bottoms
- Aluminium, brass, copper cookware unless they are clearly indicated as suitable for induction
- Pots/pans with a diameter below 12 cm
- Cookware with feet
- Ceramic cookware
- Glass cookware



## Installation and operation

### Before Use

1. Before use, clean the appliance observing instructions in section 6 'Cleaning'.
2. Dry the appliance thoroughly.
3. Place an appropriate cookware with food in the middle of the hob.



Fig. 2

EN

### Control Elements / Displayed Messages

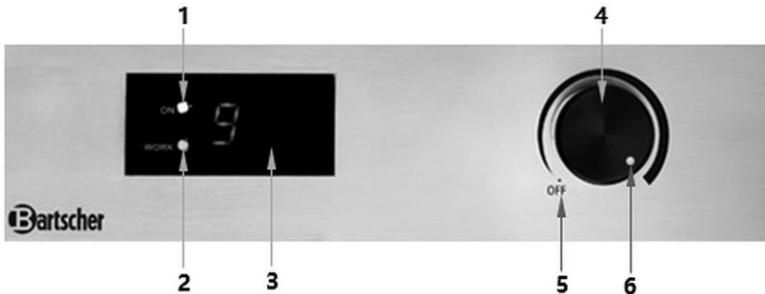


Fig. 3

- |   |                                     |
|---|-------------------------------------|
| 1. Power indicator light (ON)           | 2. Operation indicator light (WORK) |
| 3. Digital display                      | 4. Power output controller          |
| 5. Rotary controller off position (OFF) | 6. Rotary controller settings mark  |

### Appliance Start-up

#### **WARNING!**

#### **Risk of burning!**

**The hob and the appliance housing get very hot during the operation of the appliance due to hot cookware and they remain hot for some time still after switching off.**

Never touch the hot surface of the appliance.

1. Make sure that the power output controller is set to off position (OFF).
2. Connect the appliance to the power supply.

A sound signal is heard and the power indicator light (ON) is on.

The digital display shows '-'.  
The appliance is now in Standby.



Fig. 4

3. Execute the required settings according to indications below.

### Power Setting

1. Rotate the power output controller clockwise to set the power output level.  
A sound signal is heard and the set power output level appears on the digital display.

The following power output level can be set: **1, 2, 3, 4, 5, 6, 7, 8, 9.**

The lowest power output level **1** corresponds to 1000 W; the highest power output level **9** corresponds to 5000 W.

2. During the cooking/frying process, observe the appliance and the processed food products.

#### **NOTE!**

**The set power output level can be changed at any time during operation by rotating the power controller clockwise or counter-clockwise to the desired power output level.**

### Switching the Appliance OFF

1. After the end of the cooking or heat maintenance process, rotate the power output controller counter-clockwise to the off position (OFF).

The operation indicator light (WORK) go off.

The power indicator light (ON) is on.

The digital display shows '-'.  
'-'

When the appliance finishes operation, the fans cool down the appliance electronics for a few minutes and then switch off.

2. Disconnect the appliance from mains power supply.

### Overheating Protection

The appliance is equipped with the **overheating protection**. When the critical temperature is exceeded, the appliance will switch off for safety reasons.

#### **ATTENTION!**

**Heating up an empty pan or frying pan activates the overheating protection system; a acoustic signal will sound and the appliance will switch off.**

**The digital display shows '1'.**

Never place empty cookware on the hob.

When overheating protection is activated, remove cookware from the hob and leave the appliance for a few minutes to cool down.

Then, you may start using the appliance again.

## 6 Cleaning

### 6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

### 6.2 Cleaning

1. Clean the appliance regularly at the end of each working day, or more frequently if needed.
2. Wipe the glass hob, control panel and housing of the appliance with a soft, damp cloth. Use a mild, non-scrubbing cleaning agent if required.
3. Finally, dry washed surfaces with a soft cloth.
4. Ventilation openings at the rear and bottom of the appliance should not be obstructed with dirt nor dust. Clean them regularly with a brush or vacuum cleaner.

## 7 Disposal

### Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

EN

Electrical appliances should be returned to designated collection points.