

18340M



610848

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 1.0

Date of preparation: 2024-07-01

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions.....	3
1.3	Intended Use	7
1.4	Unintended Use	7
2	General information	8
2.1	Liability and Warranty	8
2.2	Copyright Protection	8
2.3	Declaration of Conformity	8
3	Transport, Packaging and Storage	9
3.1	Delivery Check.....	9
3.2	Packaging	9
3.3	Storage	9
4	Technical Data.....	10
4.1	Technical Specifications	10
4.2	List of Components of the Appliance	11
4.3	Functions of the Appliance.....	12
5	Installation and operation	13
5.1	Installation.....	13
5.2	Basics of Thermal Processing in Microwave.....	14
5.3	Cookware Suitable for Use in Microwave	15
5.4	Operation	18
6	Cleaning	22
6.1	Safety Instructions for Cleaning	22
6.2	Cleaning.....	23
7	Possible Malfunctions.....	25
8	Disposal.....	26



Read this instruction manual before using and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.

- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

EN

Fire or Explosion Hazard

- Do not place any objects inside the appliance (cookbooks, sponges, etc.). Sudden activation of the appliance can cause damage to such objects, and even burn them.
- When heating or cooking food products in containers from flammable materials such as plastic or paper, remain near the appliance as there is a risk of the appliance overheating.
- If objects in the device catch fire, leave the door closed, turn the appliance off and remove the plug from its socket or flip the main circuit breaker switch.
- Do not use metallic pots, pans or covers. Metal may lead to sparks in the cooking chamber. Use only dishes resistant to high temperatures, designed for use in microwave ovens (see sec. 5.3). Risk of fire!
- Do not prepare food products and beverages in closed or sealed containers. Such containers may crack inside the device or injure the user when being opened!

Safety

- Do not use the appliance for preparation of fresh or hard-boiled eggs, either in shell or peeled, as eggs may explode.
- Food products with thick skins, such as potatoes, pumpkins, apples or chestnuts, should be pierced prior to heating.
- Do not place solutions inside containing water, oil or grease, as such a mixture may explode.

Safety of Microwave Oven Operation

- Do not fry any food products in the appliance. Hot oil can lead to skin burns and/or damage to the appliance.
- Food products prepared in the appliance are heated unevenly. Also, containers are usually hotter than the food products inside. Carefully check the temperature of food products, especially those prepared for children. Risk of burns!
- During the heating of liquids in the microwave oven it is possible that the liquid may reach boiling temperature without externally visible bubbling. For this reason, special care must be taken when handling the container. Even a light bump, e.g. when removing the liquid from the device, may lead to spillage. Risk of burns!
- For that reason avoid using tall, narrow containers with a thin neck.
- Place a spoon (only in exceptional cases use a metallic one) or glass stirrer in the beverage, then place the dish in the center of the rotating tray. Stir the liquid prior to heating and after half the heating time has elapsed. After heating: wait for a moment, carefully stir the liquid, then remove from the cooking chamber.
- As food prepared in the microwave is heated unevenly, the contents of children's bottles must be mixed thoroughly - optimally by shaking – then, before giving the bottle to the child, check the temperature of the food. **Prior to heating food remove the bottle cap and nipple!**

Microwave Radiation Hazard!

Exposure to microwave radiation may cause bodily injury. To avoid the effects of this risk, follow the safety instructions presented below:

- Do not turn the microwave oven on when the door is open, as the appliance may emit an excess of damaging electromagnetic waves.
- Never change the safety locks!
- It is extremely important to not damage the door and that it can be closed properly. Example of damage to the door which may be unsafe include the following:
 - warping and indentations,
 - cracked and/or properly secured hinges and screws,
 - damaged door seals,
 - cracked glass pane,
 - damaged locking elements.
- The space between the door and the appliance must be free of foreign objects.
- Door seals must be tight and clean, as dirt and damage may allow electromagnetic waves to escape from the microwave oven. Take care to prevent buildup of any residues (e.g. cleaning agents, dust, grease, etc.).

EN

Operating Personnel

- The device can be used by children of 8 years old and older, as well as by people with reduced physical, sensory or mental abilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on safe use of the device and possible risks. Children should not play with the device.
- Cleaning and user maintenance may not be performed by children.

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

1.3 Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- heating-up and defrosting foods with the use of suitable cookware.

This appliance is intended for use in households and similar places, e.g.:

- in employee canteens in shops, offices, and similar areas;
- on farms;
- by customers in hotels, motels, and other typical accommodation establishments;
- in lodging-houses.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- for industrial and laboratory needs,
- as a storage compartment (e.g., for cookware/dishes),
- drying paper, textiles or other flammable materials,
- heating/heating up flammable, harmful, and quickly evaporating liquids or materials, etc.

2 General information

2.1 Liability and Warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint.

Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

EN

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications


Name:	Microwave 18340M
Art. No.:	610848
Material:	stainless steel
Thermal processing chamber material:	stainless steel, ceramic
Microwave output, in W:	1800
Number of magnetrons:	2
Number of power output levels:	6
Volume, in l:	34
Chamber dimensions (W x D x H), in mm:	360 x 405 x 225
Time setting, up to, in min.:	60
Connected load:	3,0 kW 230 V 50 Hz
Dimensions (W x D x H), in mm:	575 x 530 x 370
Weight, in kg:	33,0

We reserve the right to implement technical modifications.

Version / Characteristics

- Functions: heating-up, defrosting
- Control: rotary control knob
- Timer
- Internal lighting
- Digital display
- LED display

4.2 List of Components of the Appliance

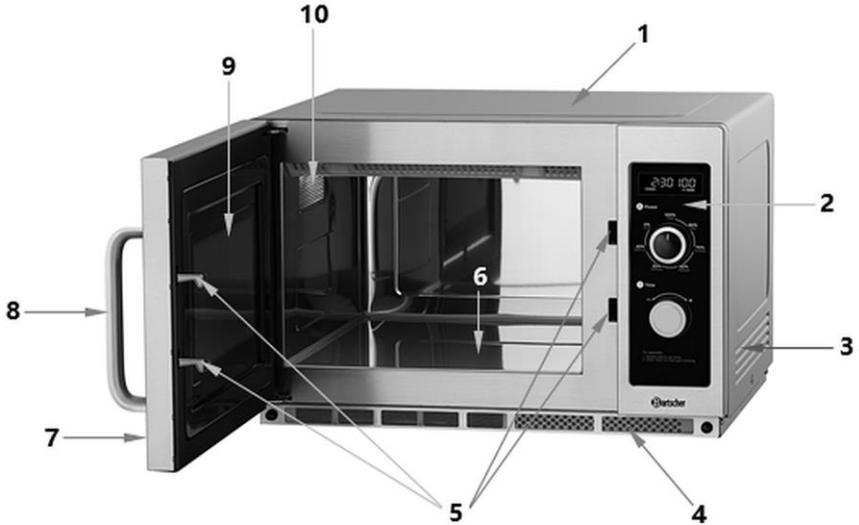


EN

Fig. 1

- | | |
|--------------------------|-----------------------|
| 1. Housing | 2. Control panel |
| 3. Ventilation openings | 4. Dust filter |
| 5. Safety closing system | 6. Ceramic bottom |
| 7. Appliance door | 8. Door handle |
| 9. Appliance door viewer | 10. Internal lighting |

Control Panel

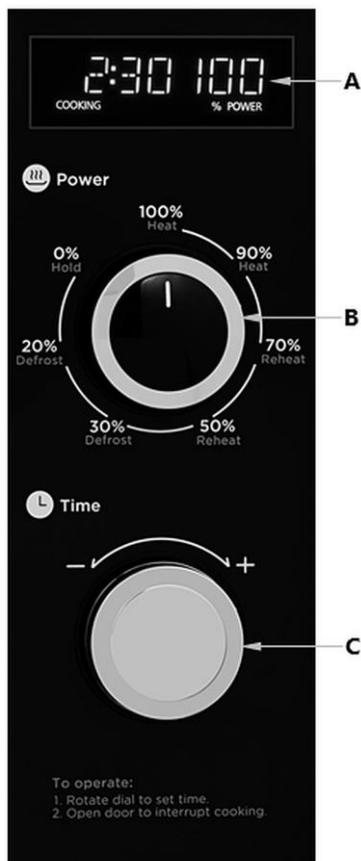

A – Digital display

B – Power output controller

Output levels	Output
Hold (standby mode)	0 %
Defrost	20 %
Defrost	30 %
Reheat	50 %
Reheat	70 %
Heat	90%
Heat	100 %

C – Timer (0–60 min.)

Fig. 2

4.3 Functions of the Appliance

The microwave unit is designed for heating up and defrosting foods with the use of cookware suitable for use in microwave units. The ceramic bottom provides even heat with a 6-stage, 1,800 W microwaves control. With the use of suitable rotary controllers you may set power output and time, as required for a given food.

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
 - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
 - sufficiently large, and thus enabling usage of the appliance with no problems;
 - easily accessible;
 - well ventilated.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- For the appliance to function properly, it must be sufficiently ventilated.
- Never cover ventilation openings.
- When installing the appliance, observe the following minimum clearances, as shown in the figure below:

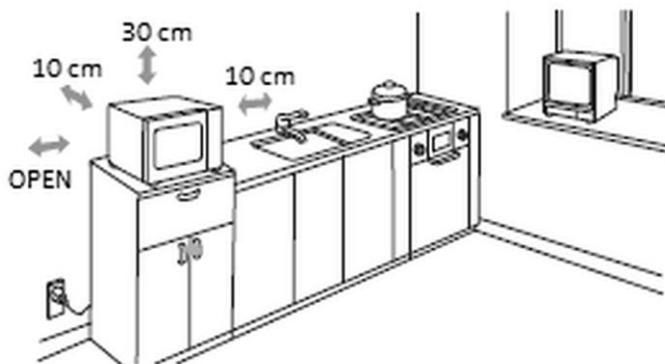


Fig. 3

- The appliance should be placed at least 2 m away from a radio, TV, etc. in order not to disturb reception.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.

5.2 Basics of Thermal Processing in Microwave

Instead of traditional heat sources, a microwave oven applies an electron lamp which emits electromagnetic waves. These waves, like radio waves, are invisible but their effects can be observed. Such waves can pass through materials such as glass, porcelain, artificial materials and paper. As these materials do not contain water, grease or oil, they are not heated by the microwaves. Simply put, the microwaves directly reach the food product, causing molecules of water, grease and oil to vibrate; friction results in the creation of heat which is used for defrosting, heating or cooking. During cooking with microwaves, heat remains inside the product being prepared, in opposition to the processes of boiling or grilling in which heat enters the food from the outside. If the device is not damaged, energy created by the microwaves remains inside the device and does not pose a threat to the user.

Installation and operation

- Carefully place food products to be cooked inside the microwave oven, with larger pieces at the outer edges.
- Remember the cooking time. It is best to at first set the shortest possible time and then lengthen cooking time as necessary. Excessive cooking time may cause the food product to smoke or catch fire.
- Cover food products during cooking. This will ensure even cooking and prevent splattering.
- Turn food products over while cooking. This will speed up the process of cooking such products as chicken or hamburgers. Large products, such as a roast, should be turned over at least once.
- Such dishes as dumplings should, after half of the cooking time has elapsed, be turned over, moved from the top to bottom, moved from the outside to the inside, etc.

5.3 Cookware Suitable for Use in Microwave

- Check that a dish is suitable to be used in a microwave.

Test: place the empty dish together with a glass of water (never activate the device when empty or with only an empty container inside), then heat at the highest power level for 60 seconds. An appropriate dish will be lukewarm. If the dish is hot, it is not appropriate for use in the microwave.

Proper materials for dishes for the microwave allow microwaves to pass through. Energy goes through the container and heats the food product.

- Do not use metallic containers or containers containing metallic parts (e.g. gold strips around the edge of a plate). Microwaves do not pass through metal.
- Do not use products from recycled materials, as they may contain small pieces of metal. If such containers are used, sparks and even fire may result.
- Dishes of oval and round shapes should be used, as food products cook more quickly in the corners of square-shaped containers.
- Wide, flat containers are best suited to use in the microwave as compared to narrow and tall ones. Food products cook evenly in flat dishes.
- To avoid food from baking onto the edge of dishes, you may cover the edges with thin strips of aluminum foil. Do not use too much aluminum foil, and leave a minimum distance of 2.5 to 3.0 cm between the foil and walls of the microwave cooking chamber.

Materials and implements that can be used in the microwave unit:

Utensils	Remarks
Cookware	Only suitable for microwave units. Follow the manufacturer's instructions. Do not use cracked nor broken cookware.
Glass containers	Always remove the lid. Glass containers can only be used to heat food until it is simply warm. Most glass containers are not heat resistant and may crack.
Heat-resistant glassware	Use only heat-resistant glassware. Make sure that there are no metal parts. Do not use cracked nor broken glassware.
Oven thermal processing bags	Follow the manufacturer's instructions. Do not close with metal fasteners. Make a cut so that steam can escape.
Paper plates and paper cups	Use only for short thermal processing/re-heating. Do not leave the appliance unattended during thermal processing.
Paper towels	Use to cover food during re-heating and to absorb fat. Use only under supervision. For short thermal processing only.
Parchment paper	Use to cover to avoid splashes or to wrap when steaming.
Plastic	Plastic cookware should be labelled 'suitable for microwave units'. Follow the manufacturer's instructions. Some plastic containers become soft when the food inside them becomes hot. 'Thermal processing bags' intended for microwave units and sealed plastic bags should be cut, punctured or vented according to instructions on their packaging.

Installation and operation

Utensils	Remarks
Food foil	Only foil designed for microwave units may be used to cover food during thermal processing in order to preserve moisture. The freshness-maintaining foil must not touch food products.
Thermometer	Use only thermometers intended for use in microwave units (meat and pastry thermometers).
Waxed paper	Use as a cover to avoid splashes and retain moisture.

Materials and implements to avoid in the microwave unit:

Utensils	Remarks
Aluminium tray	If used, it may be the source of sparks. Place food in cookware suitable for microwave units.
Food box with a metal handle	If used, it may be the source of sparks. Place food in cookware suitable for microwave units.
Metal or metal-containing containers	Metal screens food from microwave energy. Metal elements may be the source of sparks.
Metal swivel locks	May cause fire in a microwave unit.
Paper bags	May cause fire in a microwave unit.
Foaming substances	These can cause melting or contamination of a liquid inside them if exposed to high temperatures.
Wood	Wood dries out when used in a microwave unit and can splinter or crack.

5.4 Operation

Before Use

1. Before use, clean the appliance observing instructions in section 6 'Cleaning'.
2. Leave the door open for the chamber to dry completely.

Warning Indications



WARNING

Risk of burning!

Cookware may be very hot, as high temperature from food is being radiated.

Remove cookware only using oven mitts or kitchen dish-cloth.



CAUTION!

Risk of ignition!

Do not leave the appliance unattended, especially when operating at high power levels.

Reduce the power output in the case of abnormal noises, pouring or bubbling of liquids.

NOTE!

Do not heat up food directly on the ceramic bottom.

Use only cookware that is suitable for microwave units.

When heating up a number of chunks / pieces, distribute them evenly in a cookware / container, so that they do not touch each other.

Starting Up / Setting Modes

1. Check before use that the thermal processing chamber is clean, the door seals are free of foreign matter and that the door closes securely.
2. Plug the appliance into a suitable single socket.

Switching On

- The digital display shows '-----' when the appliance is first connected to the electric power supply. The appliance is in Standby mode.

Note: No rotary control knob can be operated in standby mode.

Standby Mode

- The unit must enter ready or pause mode after 1 minute without operating rotary control knobs or opening or closing the door.
- In standby mode the display is blank, the appliance does not perform any actions.
- When the appliance door is opened and closed, it leaves the standby mode and returns to the ready mode.

Ready Mode

- In that mode the device is ready to start the preset or manually set thermal processing program.
- When the appliance door is opened and closed in standby mode, the appliance enters ready mode.
- In ready mode, the digital display shows 'READY'.
- The appliance may be switched to almost all other modes from the ready mode.

'Door Open' Mode

- When the appliance door is open, the appliance is in 'Door open' mode.
- In this mode, the digital display is blank. The fan and interior lighting are on.
- When the appliance door is opened during the thermal processing, the digital display is blank and the thermal processing is interrupted.

Thermal Processing Manual Input Mode

- When the appliance is in ready mode, the power output level may be set by rotating the rotary control knob.

- By rotating the rotary control knob the thermal processing time can be set to max. 60 minutes.
- The appliance automatically starts heating up or defrosting 2 seconds later. A long beep at the end of the set thermal processing time reminds that the thermal processing time is over.

NOTE!

During thermal processing, power output and time can be changed at any given moment.

Heating-Up Food

3. Open the appliance door.
4. Place the container with the food on the ceramic bottom.
5. Close the appliance door.
6. Set the desired power output level using the power output controller.

The set power output level appears on the digital display.

The following power output level can be set:

20%, 30%, 50%, 70%, 90%, 100%.

7. Set the desired thermal processing time using the timer.

The required thermal processing time is shown in the digital display.

The thermal processing time can be set between 5 seconds and 60 minutes. In the range from 5 seconds to 1 minute, the thermal processing time can be set in increments of 5 seconds; and from 1 minute onwards in increments of 10 seconds.

The thermal processing time depends on the following food characteristics:

initial temperature:	the lower, the longer the thermal processing time
density:	the higher, the longer the thermal processing time
humidity:	the lower, the longer the thermal processing time
thickness:	the larger, the longer the thermal processing time
weight:	the larger, the longer the thermal processing time

NOTE!

As soon as the thermal processing time is set, the heating-up or defrosting process begins.

An acoustic signal is heard when the set time elapses.

8. Use the door handle to open the appliance door and remove the food.
9. Open the appliance door in order to stop the appliance during operation.
10. When food is removed before the set time elapses or when the appliance is not in operation, always set the timer to '0'.

Defrosting Techniques

The 20% and 30% (Defrost) settings in your appliance make it possible to defrost frozen food easily. The microwave energy heats the dish from the outside. The heat is gradually transferred to the inside of a food product. This ensures even defrosting of a food product.

1. Remove food from its packaging before defrosting.
2. Place food on a plate.

While defrosting proceed in accordance with the following instruction:

Covering

Food products should be covered, in order to:

- quicken their heating,
- avoid drying out,
- avoid splattering of grease in the cooking chamber,

Exceptions: bread, baked goods, breaded food products and products which are supposed to be crunchy should not be covered.

Turning over / mixing

Practically all food products should be turned over and/or mixed at least once during defrosting.

1. Sticky pieces of food should be separated as quickly as is possible.

Smaller portions

Smaller portions defrost more evenly and quicker than larger ones.

1. Divide food products into smaller pieces prior to defrosting.

An entire meal can thus be quickly and easily prepared.

Delicate foods

Delicate foods such as pate / cakes, cream, cheese or bread should be only partially defrosted, and the defrosting process should be finished at room temperature. In this manner you will avoid a situation where the food is too hot on the outside while still frozen on the inside.

Leaving dishes out

The time for leaving dishes out following defrosting is very important, as it guarantees continuation of the defrosting process. After defrosting, the defrosted food product should be cooked as soon as possible. Do not re-freeze defrosted food products.

6 Cleaning

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Clean the appliance regularly at the end of each working day, or more frequently, if needed.
2. Thoroughly remove all food left-overs and beverage remains from internal walls and ceramic bottom with a soft and damp cloth. With extensive soiling you may use a mild cleaning agent.
3. Wipe all washed surfaces with a clean cloth.

ATTENTION!

To protect elements inside the appliance against damages, do not allow water to enter the appliance through ventilation openings.

4. Clean external surfaces (housing, appliance door) with a soft damp cloth.
5. Wipe door seals and adjacent components with a slightly damp cloth (without cleaning agent).

ATTENTION!

The control panel and plastic parts must not be sprayed with cleaning agents or alkaline liquids as this can damage these parts of the appliance.

6. Clean the control panel with a dry cloth (not damp). Leave the appliance door open to avoid accidental switching on.
7. If condensed water is collecting on the inside and outside of the door, remove the humidity with a soft cloth.



NOTE!

Condensed water is collecting when the appliance is used in conditions of high air humidity. The phenomenon of water condensing is normal.

8. The smells inside the appliance can be eliminated by placing a cup of water with lemon juice and zest in a microwave-safe container for approx. 5 minutes to heat.
9. Thoroughly clean the appliance with a dry, soft cloth.


Filter Cleaning

1. Regularly clean the dust filter at the front bottom of the appliance.
2. Remove the filter as described below.

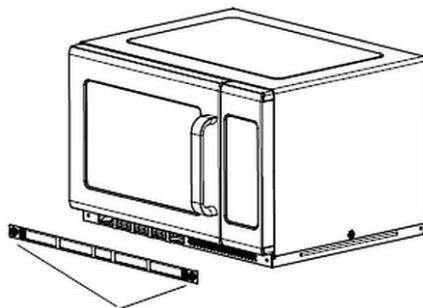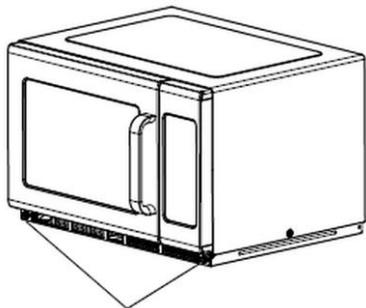

3. Rotate metal nails to the right and left, counter-clockwise, to loosen them.

4. Remove the dust filter.
5. Clean under running warm water.
6. To end with, dry the dust filter.

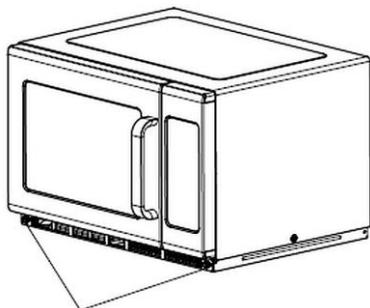

7. To reinstall the dust filter, its mounting holes must be aligned with holes in the housing.
8. Put the cleaned dust filter back in place.
9. Rotate metal nails to the right and left, clockwise, to tighten them.

7 Possible Malfunctions

Standard Interference

Microwave unit interferes with TV reception	Radio and TV reception can be interfered with when microwave units are in operation. The same is true for small electrical appliances such as a mixers, vacuum cleaners or fans. This is normal.
Dim interior lighting	During microwave thermal processing at a lower power output, the light in the thermal processing chamber may be dimmer. This is normal.
Steam build-up at the door, hot air from ventilation openings	Steam may escape from dishes during heating-up. Most of the steam escapes through ventilation openings. However, some may accumulate in a cooler area such as the appliance door. This is normal.
Accidental start-up of the microwave unit without food in the thermal processing chamber	It is prohibited to use the microwave unit without dishes inside. This is very dangerous.

Error	Possible cause	Solution
Appliance cannot be switched on	Appliance door are open	Close the appliance door
	Incorrectly connected plug	Pull out the plug and reinsert after approx. 10 seconds.
	Fuse blows or switch does not work	Replace fuse or reset circuit breaker (contact the service company)
	Problem with electrical socket	Check electrical socket with other appliances
Dish is not sufficiently defrosted, heated or thermally processed after the set thermal processing time has elapsed	Incorrectly selected time or power output level	Set the time and power output level anew Repeat the process
	Incorrectly closed appliance door	Close the appliance door properly

8 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.