

Manual for drawing up service contracts

With exception of descaling, periodical maintenance to our equipment is not necessary. However, periodical maintenance will extend the life of the machine and will reduce the chance of break-downs.

Instant equipment

Important

Before maintaining or repairing the machine, please read the safety instructions as described in the user manual, service manual or the packing of the detergent.

Please also follow up the work instructions as therein described.

User manuals and service documentation can also be found on Bravilor Bonamat's Extranet pages.

Water filter

Dependent on the hardness of the water, the machine should be descaled on a regular basis. With an average hardness of 8°DH this should take place every 1000 litres. Should the estimated usage be considerably higher than 1000 litres (approx. 8000 consumptions) it is advisable to connect the machine to a water filter. This also will improve the quality (taste and scent) of the water supplied.

Frequency

- When estimated use is less than 25000 consumptions per year, maintenance should take place once a year.
- When estimated use is more than 25000 consumptions per year, maintenance should take place once every half year.

Duration

+/- 60 minutes

Manual for drawing up service contracts

1. General

- Clean all parts as described in the weekly maintenance.
- Clean the complete machine inside and outside.
- Check all parts (inside and outside) on damage, wear and/or leakage.
- Check the complete machine on proper functioning.

2. Descaling dispensing system Instant (+/- 30 min)

- Descale the machine as described in the user manual.
- Remove water selector (Bolero XL, Quinto and Combino) after descaling and remove possible remaining scale residues; grease auger and rotation disk with silicone grease and re-assemble.
- Remove cold water reservoir and check float and pump on damages, dirt and/or wear, and re-assemble.

Necessities:

7.190.101.112 Renegite.

Silicone grease (food graded), (only for XL, Quinto en Combino).

3. Mixing system (+/- 30 min)

- Replace seal mixer motor.
- Check shaft mixer motor, and clean if required.

Necessities:

*6.229.488.001 Seal (Solo en Combino).

*6.229.806.001 + 6.030.071.020 Seal (Bolero 1, 2, XL en Quinto).

*6.030.071.007 Seal (Turbo 2010, 303 en 403).

* The number is dependent on machine type.

Manual for drawing up service contracts