

## Manual for drawing up service contracts

Periodical maintenance will extend the life of the machine and will reduce the chance of break-downs.

### Instant equipment (2021)

#### Important

Before maintaining or repairing the machine, please read the safety instructions as described in the safety manual, service manual or the packing of the detergent.

Please also follow up the work instructions as therein described.

Safety manuals and service documentation can also be found on Bravilor Bonamat internet pages.

#### Water filter

Dependent on the hardness of the water, the machine should be descaled on a regular basis.

With an average hardness of 8°DH this should take place every 1000 litres.

If the estimated consumption per year is significantly higher than 1000 liters ( $\pm$  8000 consumptions) or the water hardness level is over 8°DH, we recommend a water filter.

This will also improve the quality (taste and scent) of the water supplied.

We recommend measuring the hardness of the water on the location where the machine will stand so that the right setting in the machine for the hardness can be chosen.

#### Frequency

- When estimated use is less than 25000 consumptions per year, maintenance should take place once a year.
- When estimated use is more than 25000 consumptions per year, maintenance should take place once every half year.

#### Total duration

- $\pm$  60 minutes

### 1. General

- Clean all parts as described in the weekly maintenance.
- Clean the complete machine inside and outside.
- Check all parts (inside and outside) on damage, wear and/or leakage.
- Check the complete machine on proper functioning.

## 2. Descaling (± 50 min.)

- Descal the machine as described in the descale procedure in the display or in the user manual of the machine.  
**Duration descale:** ± 40 min.
- Remove the water selector (Bolero 32, 43) after descaling and remove possible remaining scale residues; grease the auger and rotation disk with silicone grease and reassemble.
- Remove the cold water reservoir and check the float and pump on damages, dirt and/or wear, and reassemble.  
**Duration cleaning water selector and waterreservoir:** ± 10 min.

### Necessities:

- » 7.190.101.212 Renegite
- » Silicone grease, food graded (only for Bolero 32, 43)

## 3. Mixing system (± 10 min.)

- Replace both seals of the mixer motor.
- Check shaft mixer motor on dirt and wear, and clean if required.

### Necessities:

- » 6.229.488.001 Seal (Solo).
- » 6.229.806.001 + 6.030.071.020 Seal (Bolero 11, 21, 32, 43).
- » 6.011.001.152 O-ring (Bolero 11, 21, 32, 43 and Solo).
- » 6.011.001.167 O-ring (Bolero 11 3kW, 21 3kW).

The quantity on the number of mixing units of the machine.