

Cold water equipment

Manual for drawing up service contracts

With exception of flushing the cold water system, periodical maintenance to our equipment is not necessary. However, periodical maintenance will extend the life of the machine and will reduce the chance of break-downs.

Important

Before maintaining or repairing the machine, please read the safety instructions as described in the user manual, service manual or on the packing of the detergent. Please also follow up the work instructions as therein described. User manuals and the service documentation can also be found on the Extranet pages of Bravilor Bonamat.

Frequency

Applicable for the Chiller is that, irrespective the number of consumptions, maintenance has to take place once every half year.

Duration

- Chiller ± 60 minutes carry out work instructions 1 - 2.

1 General

- Clean all parts as described in the weekly maintenance.
- Clean the complete machine on inside and outside.
- Check all parts (inside and outside) on damages and/or leakage.
- Check the complete machine on proper functioning.

2 Flushing cold water system

- Flush the cold water system.
- Replace the water filter.
- Clean ventilator grid at the back side (with a vacuum cleaner).
- Reset filter replacement indication.

Please note! For the 4^e version a different cleaning procedure is applicable than for the 2^e and 3^e version.

Necessities

- 1x 7.211.008.101 Water filter (version 4)
- 1x 7.211.007.101 Water filter (version 2 and 3)
- 25ml. Hadex® (sodium hypochloride)