 


## 4, Product Structure

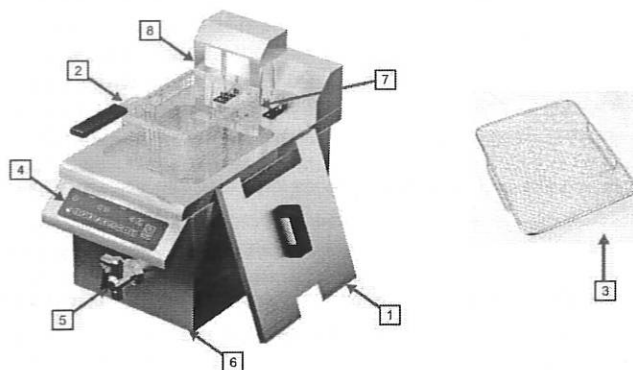

 
1. Lid
2. Fry basket
3. Fryer screen
4. Control panel
5. Tap
6. Bottom plate
7. Temperature sensor
8. Auto lifting system

## 5, Operation preparation

Insure the tap (5) is switch off


Insure the plug is well connected, the Voltage is for 230V.

## 6, Operating instruction

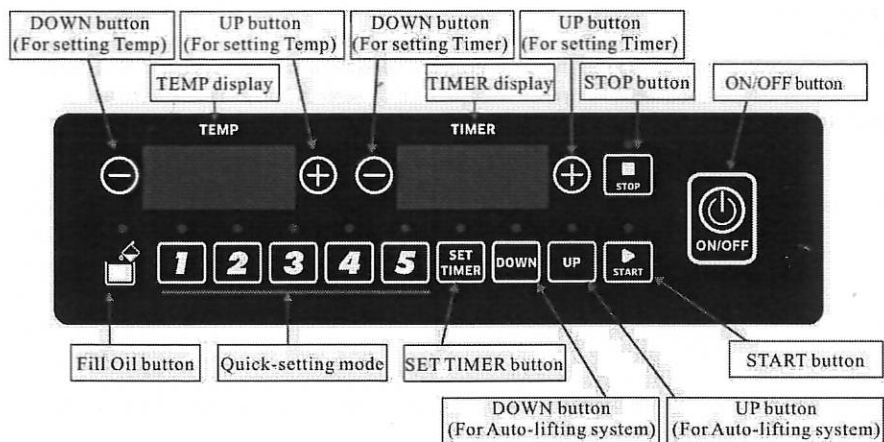

- 1). Touch ON/OFF to switch on or switch off the equipment, when the deep fryer is switched ON, the

## 4, Product Structure

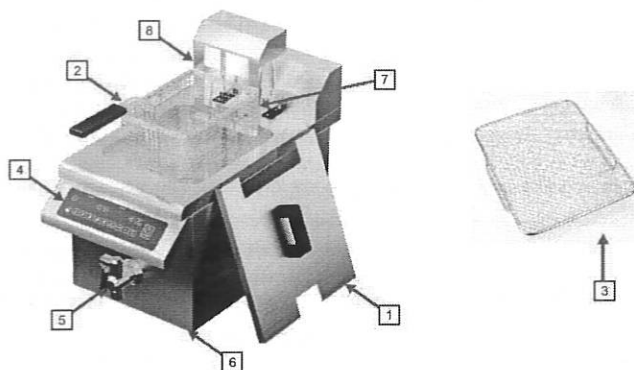 


1. Lid
2. Fry basket
3. Fryer screen
4. Control panel
5. Tap
6. Bottom plate
7. Temperature sensor
8. Auto lifting system

## 5, Operation preparation

 Insure the tap (5) is switch off

Insure the plug is well connected, the Voltage is for 230V.

## 6, Operating instruction

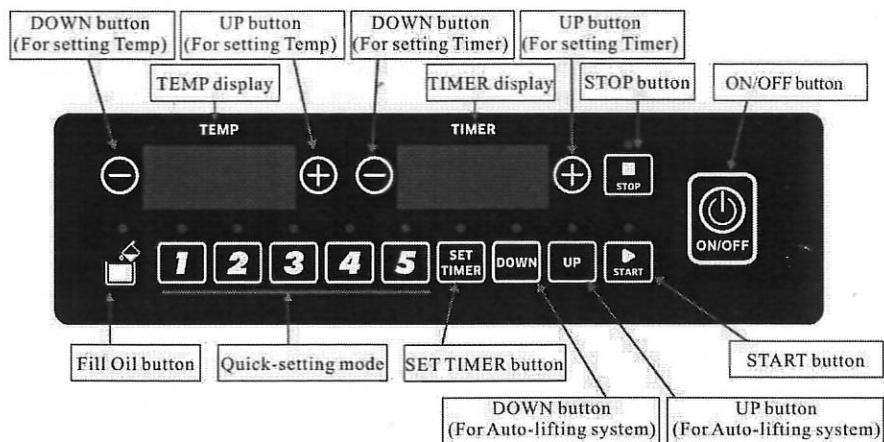

- 1). Touch ON/OFF to switch on or switch off the equipment, when the deep fryer is switched ON, the