

Install a fixed water connection

The Sprso is not equipped with a fixed water connection as standard. If a fixed water connection is connected, there are two things to bear in mind:

Descaling procedure


- additional steps added, see sticker on fixed water connection (water tank).

Water filter


- install an external water filter between the tap and the Sprso, a filter can no longer be placed inside the water tank.



- replace the water tank
- attach the water connection hose to the water tank
- ▶ *Always use the new food approved hose set that is supplied with the water tank.*

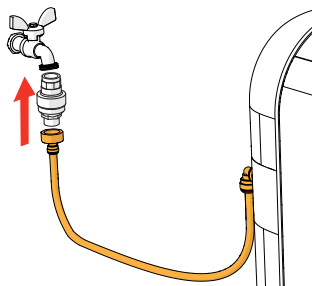

- ▶ *It is recommended to use a water stop, read the original installation instructions supplied with the water stop.*
- connect the hose to the water stop or directly to the water tap

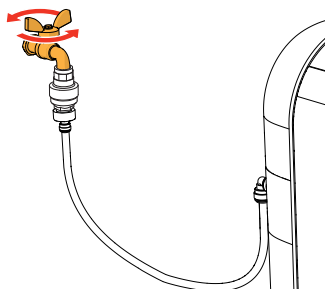

- open de water tap